

Tricor Configurator Installation manual


Tricor Configurator is Windows based software for communication with TCE8000 electronics.


For connecting the TCE8000 electronics on your Laptop/PC please use the FTDI USB to RS485 Serial Converter Cable (http://www.kem-kueppers.com/zubehoer/schnittstellenadapter/schnittstellenadapter_usbbr/?lang=en). The current revision of the Tricor Configurator is operable only in combination with the FTDI Converter!

FTDI USB Driver Installation

Download the current FTDI driver from the KEM homepage: <http://www.kem-kueppers.com/downloads/software/?lang=en>

Unzip the executable file in a local directory on your computer and start the installation (s. pictures below). **Note:** administrator rights are required to run this installation

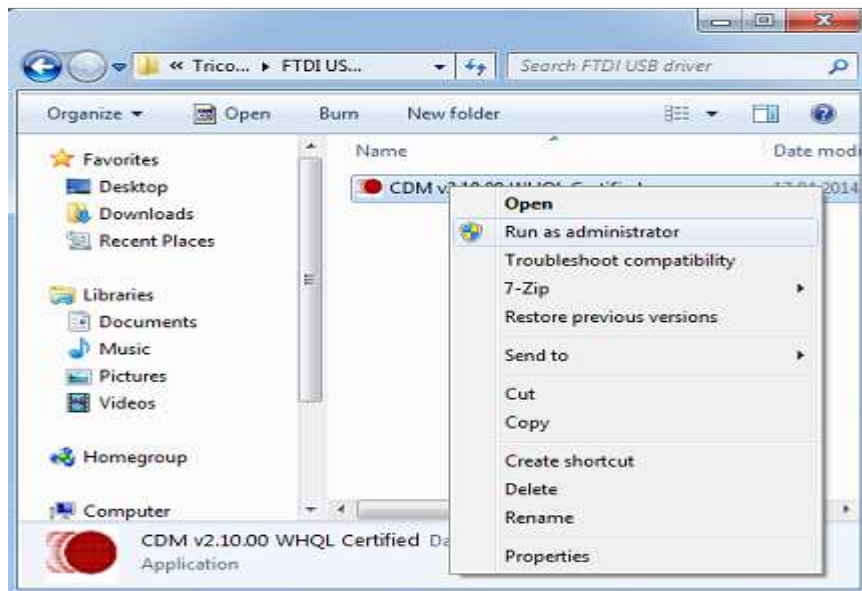

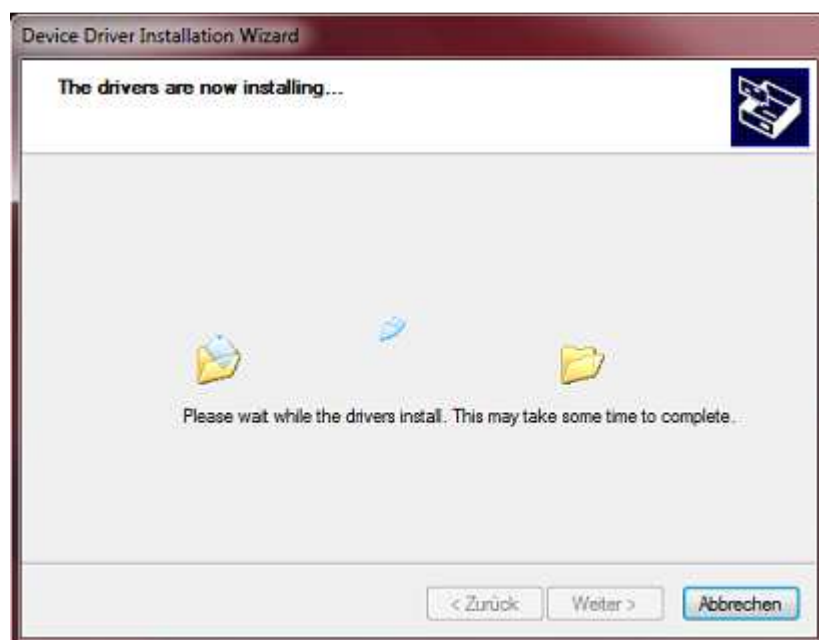






TricorConfigurator Installation

Download the current software release from the KEM homepage: <http://www.kem-kueppers.com/downloads/software/?lang=en>

Unzip the files in a local directory and run the setup.exe

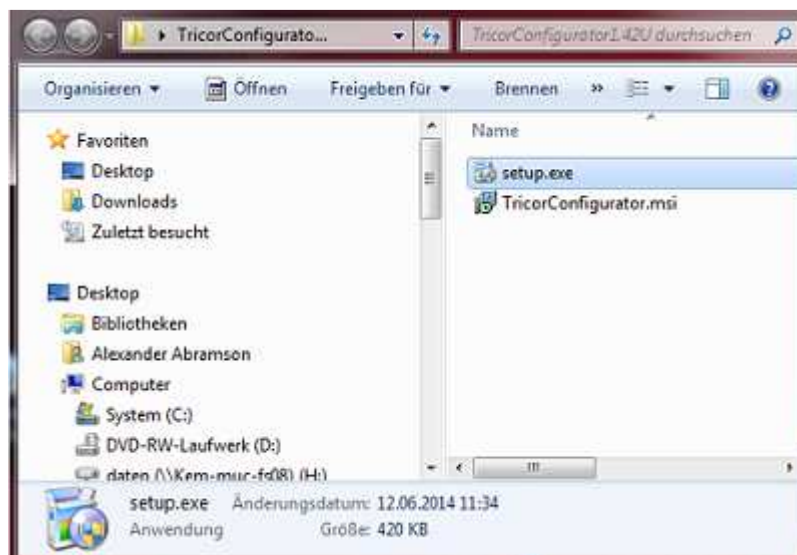


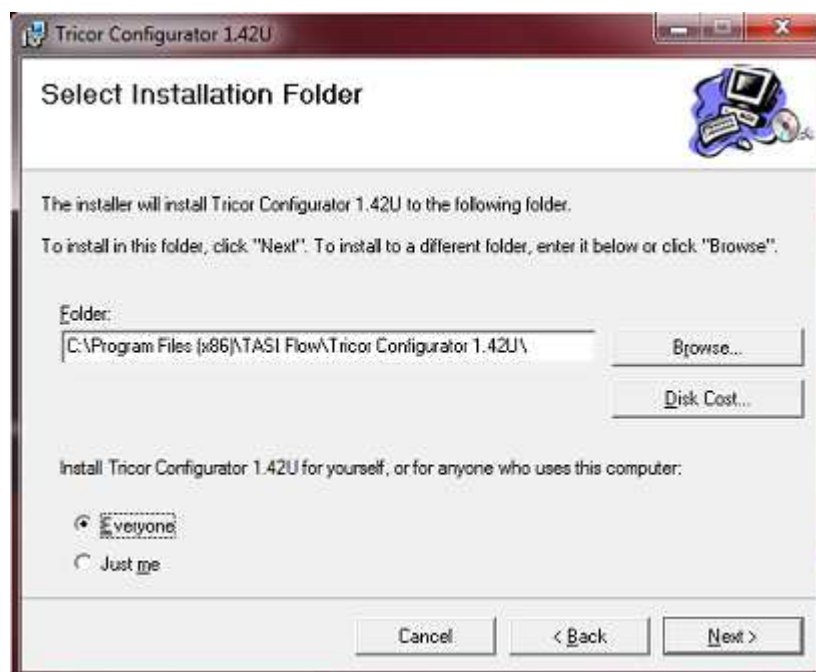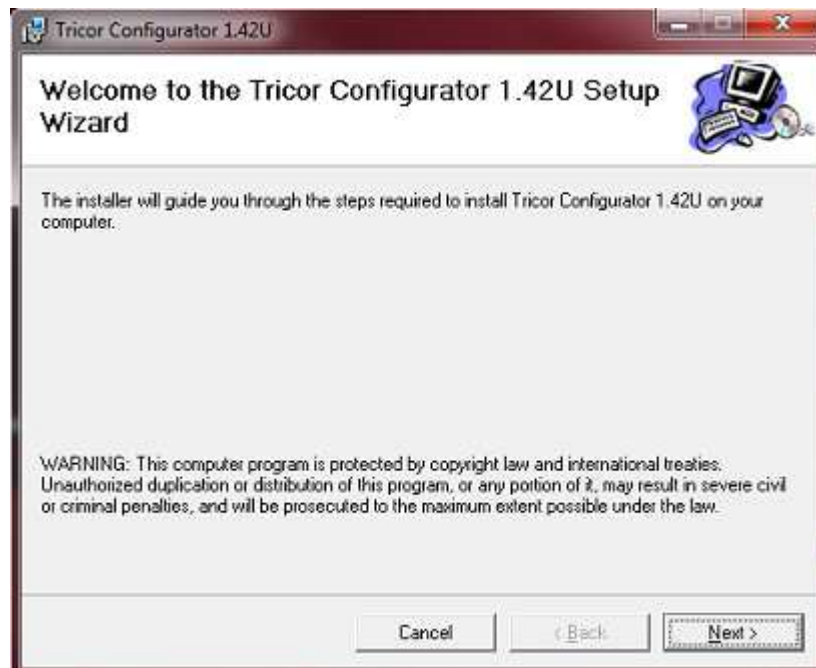



Build-up the communication between the Tricor electronics and your PC

Connect the TCE8000 as shown in the diagram below and start the TricorConfigurator , please use the shortcut TricorConfiguratorXXXX.exe on the windows desktop.

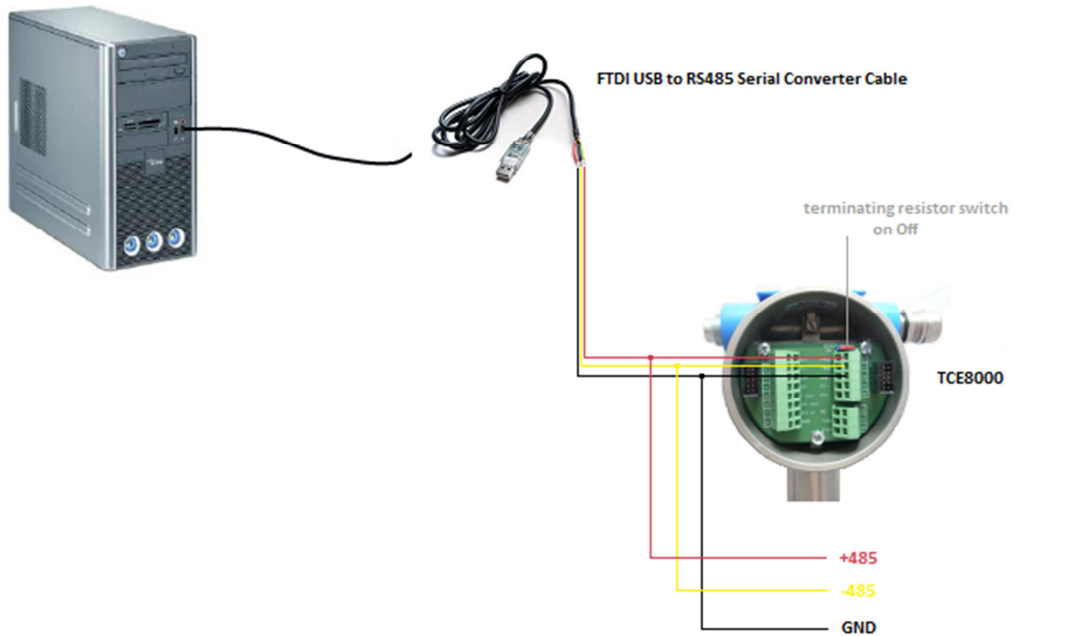

The main view shown in the screen shot below you will see after starting the TricorConfigurator.

